

USER MANUAL

QUICK INSTALLATION GUIDE

MRGB65 / MRGB65S





MARINE GRADE 6.5" COAX SPEAKERS



FEATURING 17 COLOR RGB LED's and RF REMOTE CONTROLLER

TABLE OF CONTENTS

BEFORE YOU START IMPORTANT SAFETY PRECAUTIONS INSTALLATION PRECAUTIONS	2
WIRE DIAGRAM	3
BEFORE INSTALLING THIS PRODUCT TECHNICAL SUPPORT	4
SUGGESTED MOUNTING LOCATIONS	5
GETTING STARTED	6
SPEAKER TEMPLATE	7
TROUBLE SHOOTING GUIDE	8
SPECIFICATIONS	

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of AVA Enterprises Inc.

Copyright © 2015 AVA Enterprises Inc.



Thank you for purchasing this

3055 AUDIO SYSTEMS

MRGB65 6.5" Coax Speakers w/ RGB LED RF Controller
Please read through these instructions carefully so you will know how to operate your model properly.

 
After you have finished reading these instructions, keep this document in a safe place for future reference.

THIS PACKAGE CONTAINS

2x- MRGB65 / MRGB65S Coax Speakers (Depends on your model)




1x- RF Remote Controller



2x- HUB Wire Extension Kit



 1x- User Manual / 1x- Warranty Card







FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of this device.



BEFORE YOU START

IMPORTANT SAFETY PRECAUTIONS

BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:

- Do not turn up the volume so high that you can't hear what's around you.
- Use caution or temporarily discontinue use in potentially hazardous situations.
- Do not operate mobile video equipment while driving a motorized vehicle
- Safe vehicle operation and safety consideration of others should always be your highest priority.
- Set your volume control at a low setting, then slowly increase the sound until you can hear it comfortably without distortion, or ear discomfort.
- In the event you should notice smoke, strange noises or odor from this product, or any other abnormal signs, immediately turn off the power and consult your dealer or the nearest authorized BOSS AUDIO Service Center. Using this product in this condition may result in permanent damage to the system.


INSTALLATION PRECAUTIONS

WARNING - Always consult with a professional installer

- Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without professional training and experience in electronic equipment and motorized vehicle accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards
- Refer any repairs to a qualified BOSS AUDIO SYSTEMS Service Center
- The MRGB65 LED RGB SYNC HUB should be wired directly to a normally open switch or relay.
- When wiring directly to the vehicles battery, be sure to disconnect the batteries negative terminal wire before starting any wiring procedures,if extending the main power wire, it is suggested that an optional fuse and fuse holder (not included) with minimum rating of 10 Amperes be in-line with the positive battery terminal
- The ground cable length should not exceed 18-inches (See wiring diagram pg 4)
- The *MRGB65* has a weather resistant design, it should not be submerged in or under water under any circumstances
- Use only the installation parts provided with the MRGB65



WIRE DIAGRAM

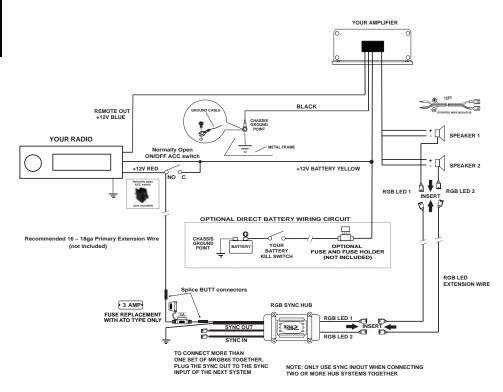


- Do not touch the speaker flex wire
- The RGB HUB controller should be installed in a non-metal and dry location
- Secure all wiring with wire ties
- Properly seal connections to ensure water tight connections



CAUTION!! Do not ground or short the RGB wires



BEFORE INSTALLING THIS PRODUCT

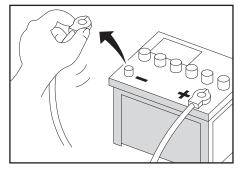

To avoid potential shorts in the electrical system, be sure to disconnect the (–) battery cable before installation. Use this unit with a 12-volt battery and negative grounding only.

Failure to do so may result in a fire or malfunction.



When replacing the fuse, be sure to only use a fuse of the rating specified on this product.

To avoid short-circuiting, cover any disconnected leads with insulating tape. It is especially important to insulate any unused wires, which if left uncovered may cause a short circuit. When connecting other devices to this product, refer to the manual for the product to be connected. The black cable is ground, make sure to connect the ground wire first.

Ensure that the ground cable is properly connected to metal parts of the vehicles body frame or direct to the battery if your vehicle does not have a grounded chassis frame The ground cable of this units power amp and a second powered system must be connected to the frame separately with different screws. If the screw for the ground wire loosens or falls out, it could result in fire or malfunction.

TECHNICAL SUPPORT

1-800-999-1236 www.bossaudio.com/support



TOOLS NEEDED:


- Wrench and/or Pliers
- #2 Phillips screwdriver
- Crimp tool
- Handsaw / Jig Saw
- Electrical tape



SUGGESTED MOUNTING LOCATIONS

The MRGB65 can mounted in three different configurations:

Always double check for mountig depth limitations, never cut before you check

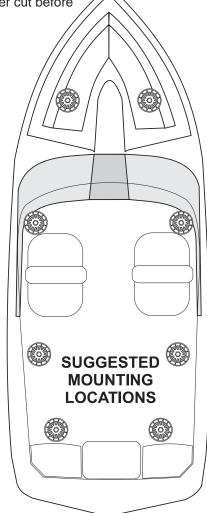




CAUTION!! Using other mounting methods may void this warranty



GETTING TO KNOW YOUR MRGB65 RF CONTROLLER

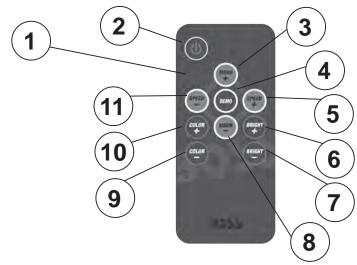

- RF CONTROLLER
- POWER ON / OFF
- MODE UP
- 4 AUTO DEMO
- 5 SPEED UP
- 6 BRIGHTNESS UP
- 7)BRIGHTNESS DOWN
- 8 MODE DOWN
- 9 COLOR DOWN
- (10)_{COLOR UP}
- SPEED DOWN

- 1) RF controller range: Up to 25ft (LoS)
- 2) Do not obstruct the RF remote with metal
- 3) Always keep away from small children
- 4) Do not store in direct sunlight


REPLACEMENT BATTERY - CR2032





SPEAKER TEMPLATE

TEMPLATE FOR REEFERENCE ONLY - NOT TO SCALE

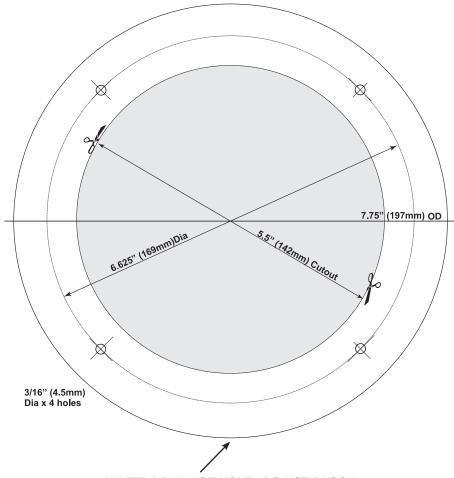

WATER DRAINAGE HOLE - DO NOT BLOCK

BE SURE TO MOUNT SPEAKER IN THE CORRECT ORIENTATION TO ALLOW FOR WATER DRAINAGE



To avoid battery exhaustion be sure to run the vehicles engine while using this product. Using this product without running the engine can drain the battery.





TROUBLE SHOOTING GUIDE

TROUBLE	CAUSE	SOLUTION
	The fuse is blown	Check / replace the fuse
RGB Unit will not turn on	Switch not engaged	Turn to on position
	Blown speaker	Replace faulty speaker
	Volume is low / muted	Press the volume level up
No sound is heard	Device is paused or muted	Check your devices playing / volume status
Unit has become unresponsive	Power glitch or interference	Disconnect power for 10 seconds to reset

TECHNICAL SUPPORT

1-800-999-1236 www.bossaudio.com/support

SPECIFICATIONS

SPEAKER GENERAL SPEC

- · Speaker Type: Full Range
- Configuration: Coaxial
- · Woofer Size: 6.5"
- Tweeter Size: 1"
- Mounting Depth: 2-5/8"
- Mounting Diameter: 5-3/4"
- Peak Power Handeling: 200 Watts
- Impendance: 4Ω
- Sensitivity (1W/1M): 88dB
- Frequency Response: 70 Hz to 20 kHz, ±1 dB

RGB HUB GENERAL SPEC

- Power source: 14.4VDC (10.8V ~ 16V allowable)
- Grounding System: Negative type
- Maximum Current Consumption: 1.5A
- Unit Weight: 2.08lbs / 0.94kg
- Storage Temperature: 5°F to 113°F / -15°C to 45°C
- Operation Temperature: 14°F to 104°F / -10°C to 40°C



ADJUSTMENT OR ALTERATIONS OF THIS DEVICE MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.



